




Specialists in fireplace design and manufacture

HALO 800 FREESTANDING SOFTWOOD **INSTALLATION & OPERATING INSTRUCTIONS**

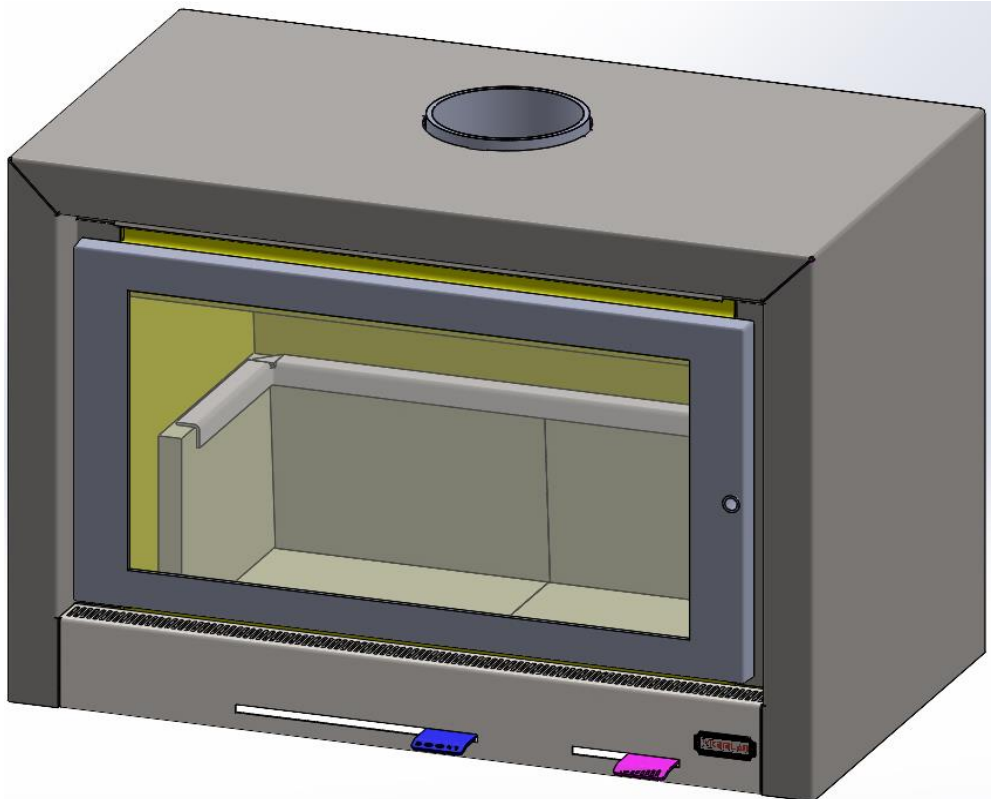

IMPORTANT:

INSTALLER, PLEASE LEAVE THESE INSTRUCTIONS WITH THE UNIT ON COMPLETION.

10 YEAR FIREBOX WARRANTY

**The firebox is covered by a 10 year warranty.
Other parts are covered by a one year limited warranty.**

Head Office - 13 French Avenue, Brendale, Queensland 4500

Telephone - PH: (07) 3490 5500

Facsimile - FAX: (07) 3490 5520


Website: - www.jetmaster.com.au

Business hours: - Monday to Thursday 7:30am-4:00pm. Friday 7:30am-2:00pm

Email: - sales@jetmaster.com.au

DIMENSIONS

HALO 800 FREESTANDING SOFTWOOD

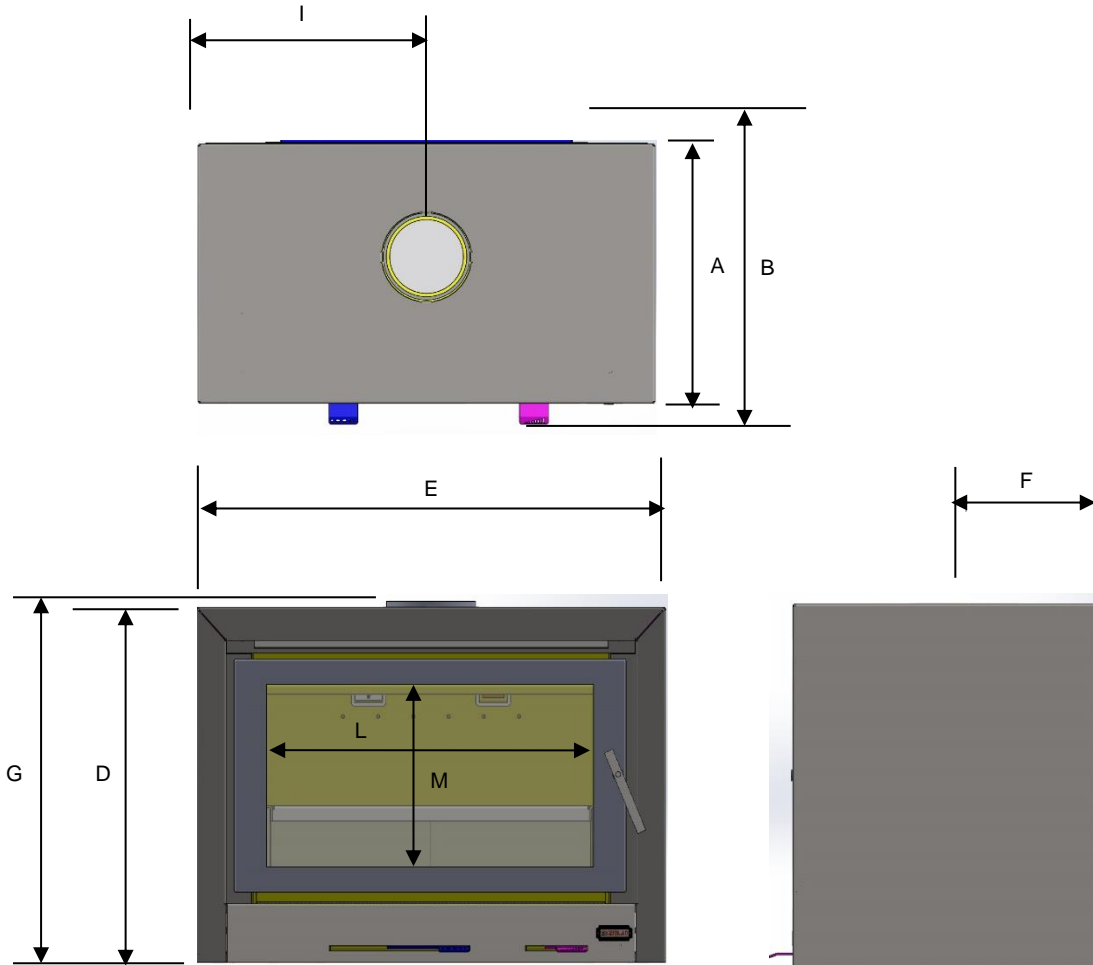


DESC.	MODEL	A	B	D	E	F	G	I	L	M
HALO 800 FS SOFTWOOD	FREESTANDING	493	595	588	866	220	598	433	603	302

DIMENSIONS

HALO 800 FREESTANDING SOFTWOOD CLEARANCES

Parallel position

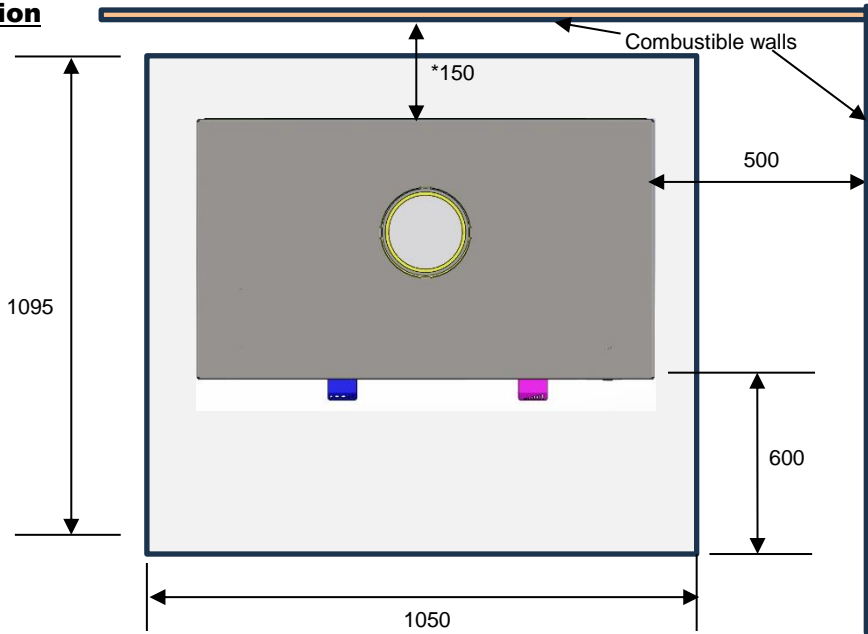


* The rear wall clearance can be reduced to 150mm from a combustable wall when installed with an additional 900mm high x 180 deg. stainless steel rear flue shield.. The rear flue shield must cover the rear of the spigot. The back clearance will be 350mm if an additional flue heatshield is not fitted


Hearth Table

UNIT H OFF GROUND	18	100	200	300	400	500
HEARTH EXTENDS	600	590	560	520	440	300


Corner position

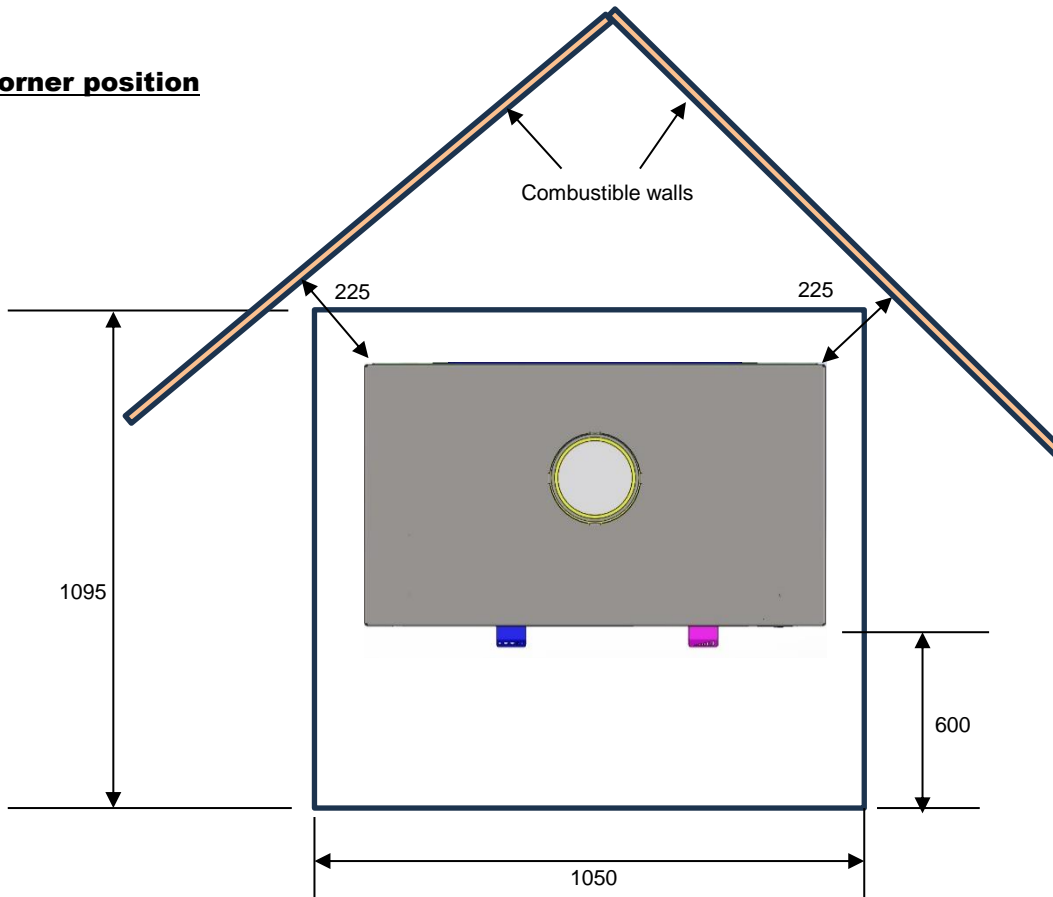

HALO 800 SOFTWOOD FREESTANDING MERIDIAN BENCH MEASUREMENTS

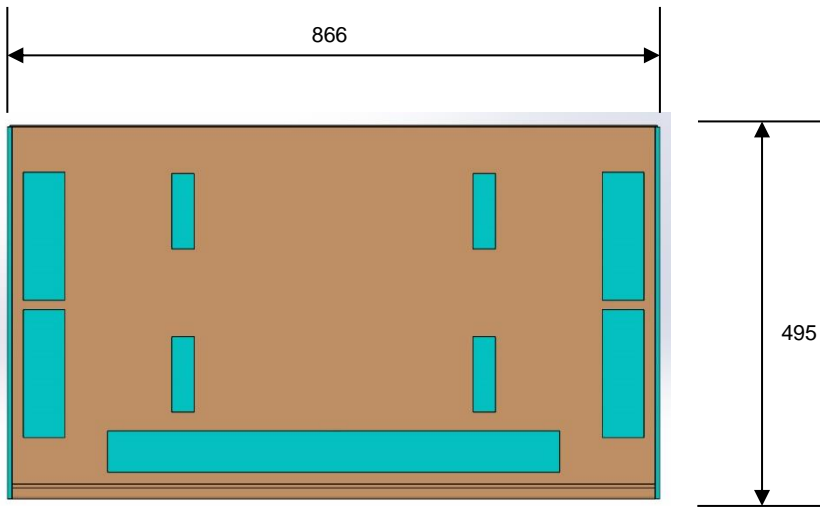


TOP VIEW

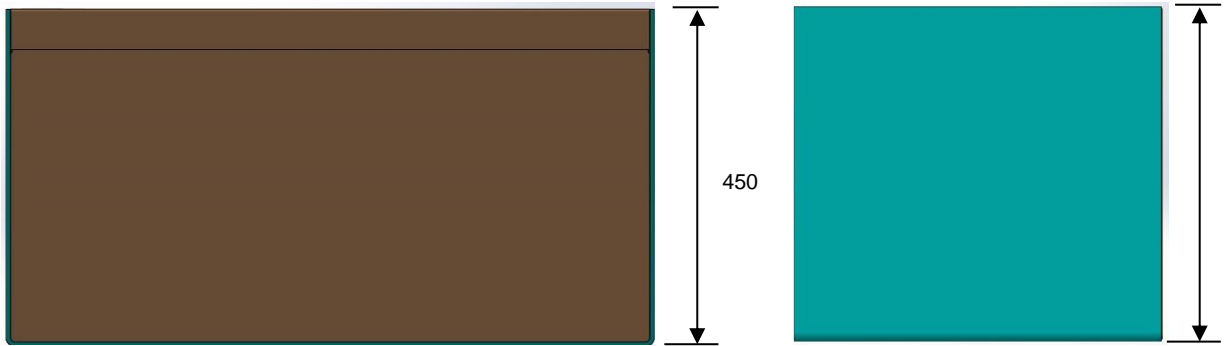

FRONT VIEW


SIDE VIEW

FREESTANDING UNIT WITH HEAT SHIELD (APPENDIX F)

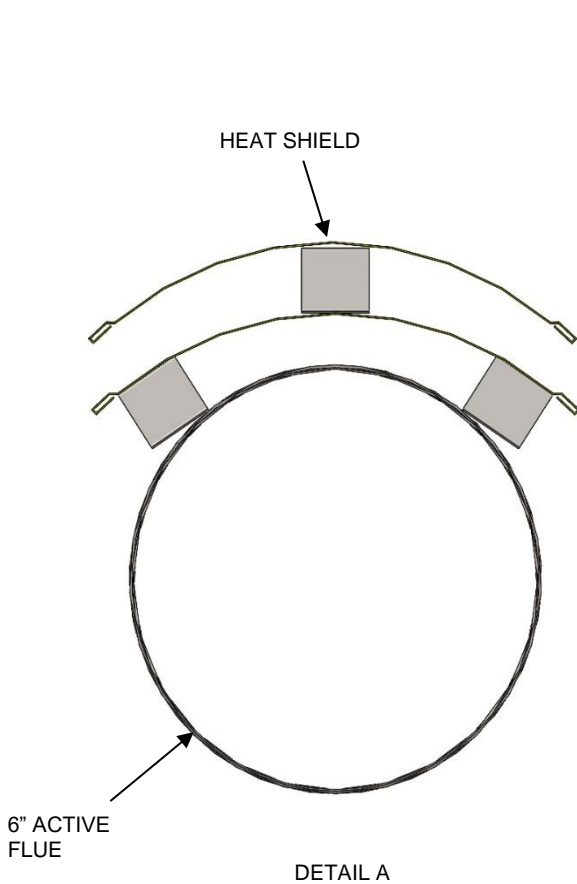

DETAIL A

THE HEAT SHIELD WILL COVER 33% OF THE TOTAL CIRCUMFERENCE OF THE ACTIVE FLUE.

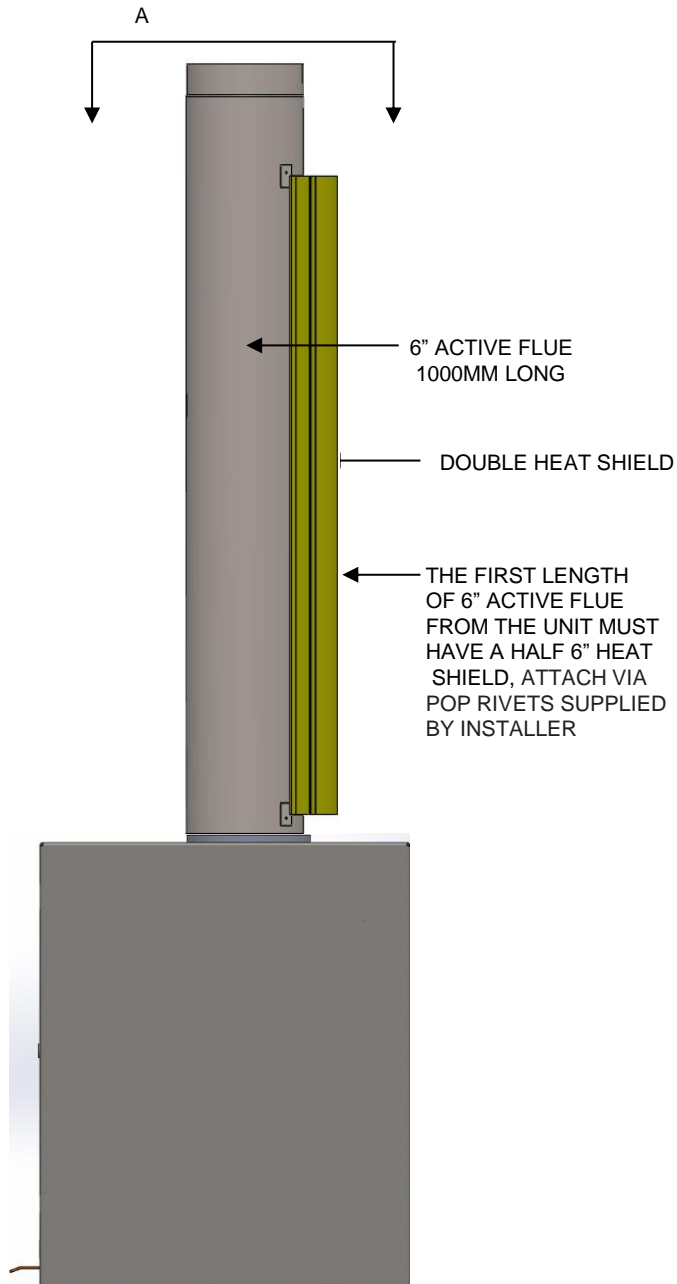

IMPORTANT:



NEW FLUE KIT ACTIVE + HALF HEATSHIELD – “ANY SINGLE HEATSHIELD CAN BE USED FROM 900MM UP TO 1200MM HEIGHT”

IMPORTANT: ANY APPENDIX F APPROVED FLUE KITS CAN BE USED ON THESE KEMLAN FREESTANDING FIREPLACES AS LONG AS IT COMPLIES WITH THE LABORATORY TESTED HEAT SHIELDING”

FREESTANDING FLUE KIT (APPENDIX F)

- 2 – 6” STAINLESS STEEL FLUE 1000mm CRIMPED**
- 2 - 6” STAINLESS STEEL FLUE 1000mm CRIMPED, BLACK**
- 1 – 8” GALVANISED FLUE 1000mm PLAIN**
- 1 – 8” GALVANISED FLUE 1000mm CRIMPED**
- 1 – 10” GALVANISED FLUE 1000mm PLAIN**
- 1 - 10” DROP BOX, 6”-10” VENTED CAP,
CRIMPED, BLACK**
- 1 - 6” DOUBLE HEATSHIELD BLACK**
- 2 – ANGLE BRACKETS GALVANISED
1200x50x50mm**
- 1 – 10” ROUND CEILING TRIM, BLACK**
- 1 – 10” RAKED CEILING TRIM**
- 1 – 6” – 10” DOUBLE CONE COWL**
- 1 – SPACING KIT**
- 1 – INSTALLATION INSTRUCTION**


FREESTANDING UNIT WITH HEAT SHIELD (DECRO 8")

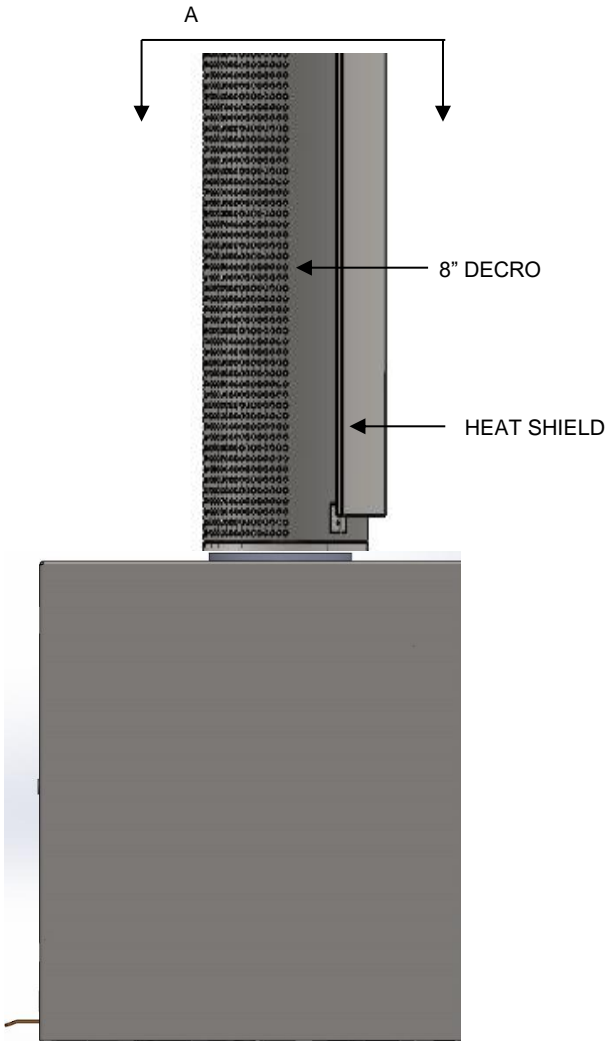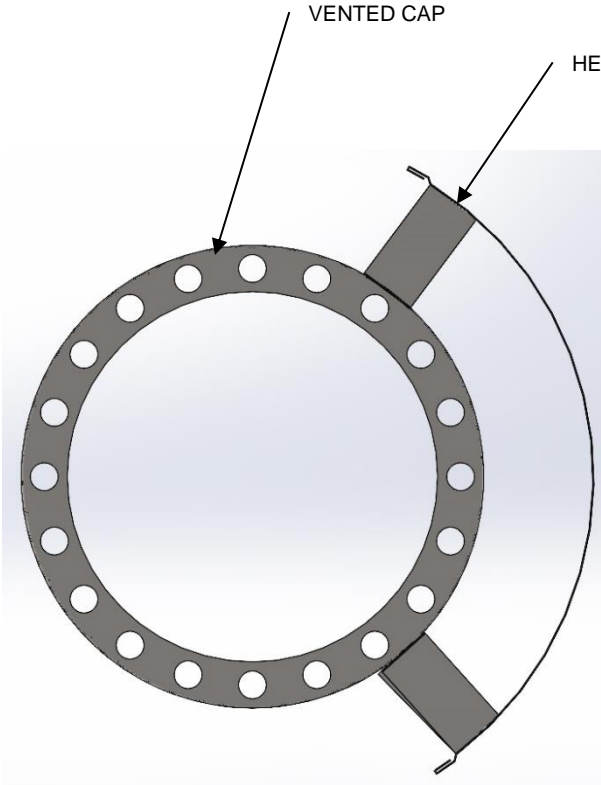


FREESTANDING DECRO FLUE KIT

- 3 – 6” STAINLESS STEEL FLUE 1000mm CRIMPED**
- 1 – 6” STAINLESS STEEL FLUE 1000mm CRIMPED/SWAGED**
- 2 – 8” GALVANISED FLUE 1000mm PLAIN/CRIMPED**
- 1 – 10” GALVANISED FLUE 1000mm PLAIN**
- 1 - 10” DROP BOX, 8”-10” VENTED CAP,
CRIMPED, BLACK**
- 1 – DECROSHIELD (A) 8” -900mm (WITH HEATSHIELD)
BLACK**
- 1 - DECROSHIELD (E) 8” -900mm (WITH HEATSHIELD)
BLACK**
- 2 – ANGLE BRACKETS GALVANISED
1200x50x50mm**
- 1 – ADDITIONAL HEATSHIELD**
- 1 – 10” ROUND CEILING TRIM, BLACK**
- 1 – 10” RAKED CEILING TRIM BLACK**
- 1 – 6” – 10” DOUBLE CONE COWL**
- 1 – SPACING KIT**
- 1 – INSTALLATION INSTRUCTION**


HALO 800 SOFTWOOD **INSTRUCTION** **FOR SEISMIC RESTRAINTS**

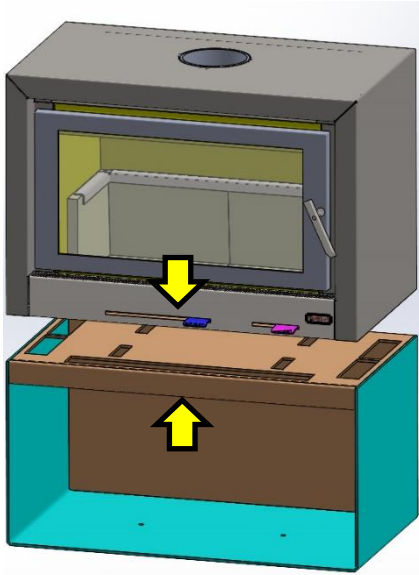

Place the appliance on top of the meridian base. Make sure to align the front and side edges of the appliance to the meridian base.

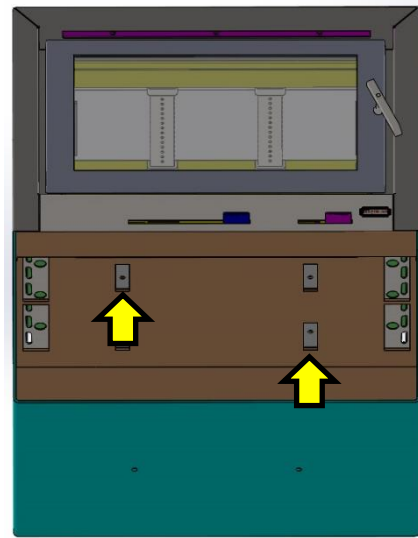


Locate and align the holes on the underside of the appliance and top of the meridian base. Use the supplied bolts and washers, then tighten, this will hold the appliance in place.

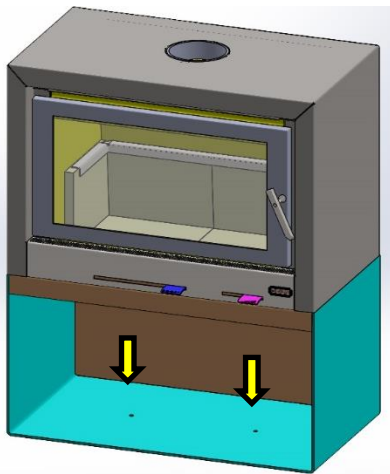


Position the appliance and meridian base assembly to the desired position. Make sure the flue hole is in the required position. Use the existing holes at the bottom of the meridian base to drill the holes for m8-m10 dyna bolts. Use the preferred dyna bolt size and affix the appliance and meridian base assembly to the floor. When both dyna bolts are tightened the installation is complete.


SEISMIC RESTRAINTS TABLE INSTALLATION

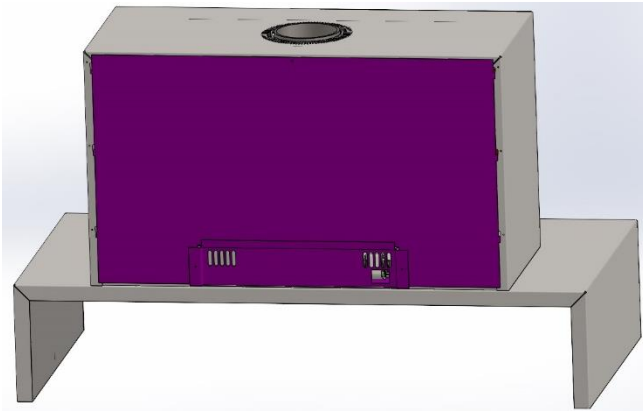

Place the back of the appliance aligned to the back edge of the table. Make sure the appliance is centred from the left and right edges.

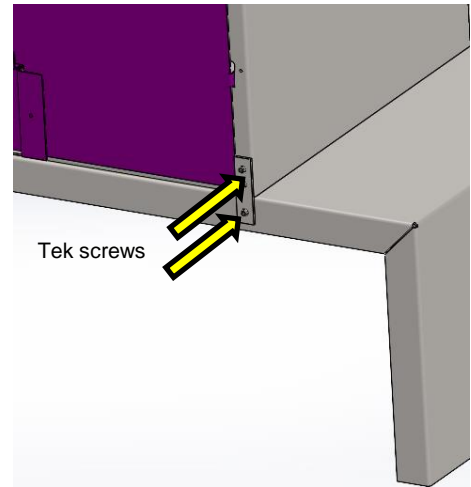


Attach the supplied bracket by locating the holes in the appliance and table on both sides as indicated. Use Tek screws and attach the appliance by using the pilot holes on the bracket. Position bracket to 10mm from the underside of the table and edge of the appliance on the side.

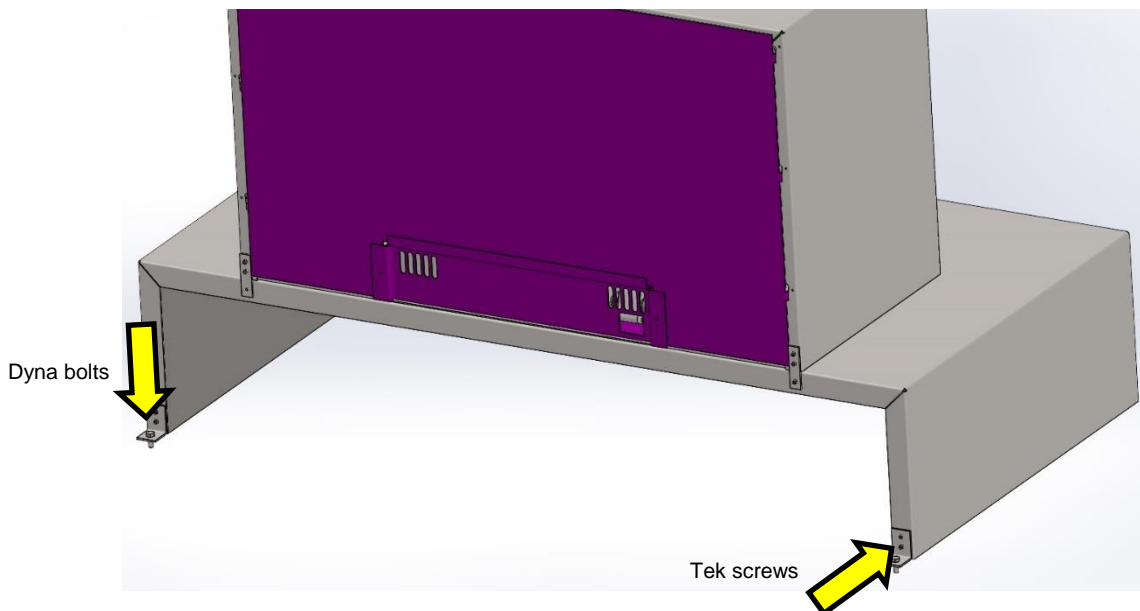


Position the appliance and table assembly to the desired position. Make sure the flue hole is in the correct position. Use Tek screws and attach the bracket to the table. Use the holes at the bottom of the angle bracket to drill the holes for m8-m10 dyna bolts to the floor. Use the preferred dyna bolt size and affix the appliance and table assembly to the floor. When both dyna bolts are tightened the installation is complete.


HALO 800 SOFTWOOD BAFFLE PLATE / AIR TUBE INSTALLATION INSTRUCTION

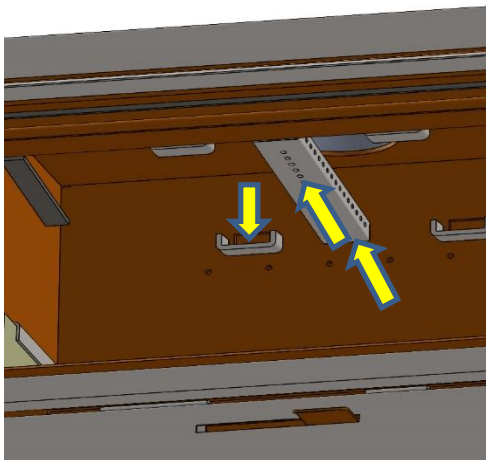


1. Install the first air tube by pushing it up, over and into the air tube holders. Make sure the air tube end with no cap is installed towards the back.

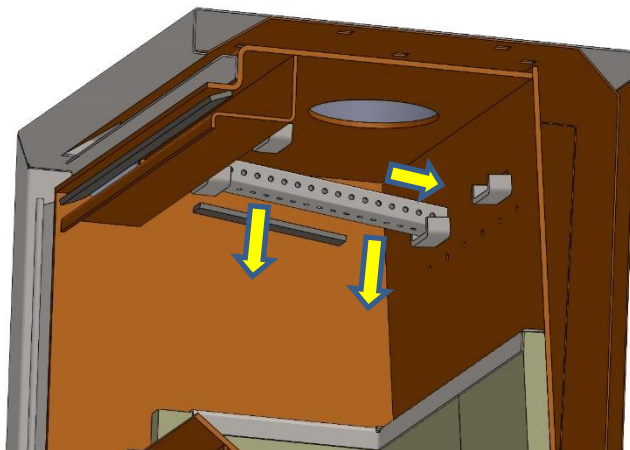


2. All air tube holes must point to sides and bottom of the appliance. Push the air tube as far back as possible.

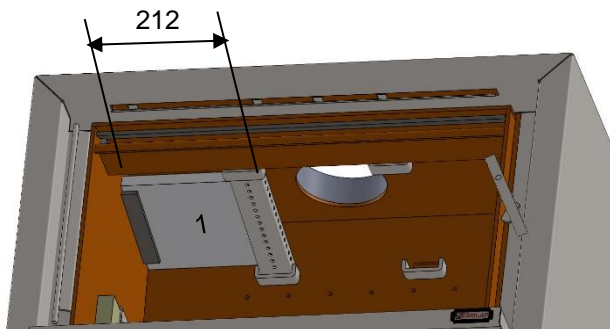


3. Place baffle plate (1) on top of the air tube, 212mm left to right, 222mm front to back, push baffle plates as far back as possible

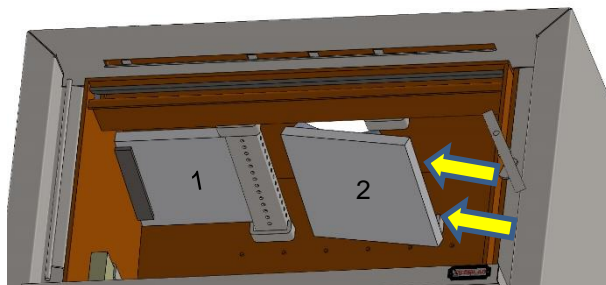

4. Position baffle plate (2) on top of baffle plate (1).

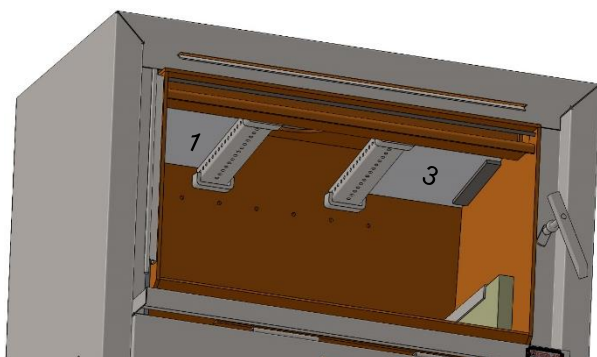

5. Install air tube and baffle plate (3) as per figure (3), this time install the baffle plates opposite side to the first one.

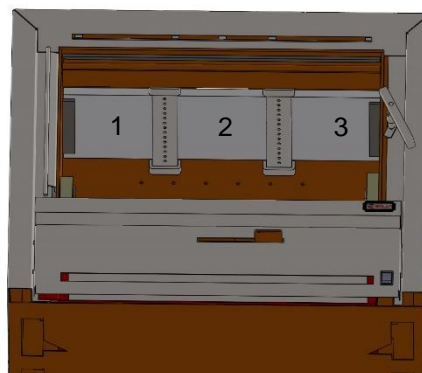

6. The final step is to install the baffle plate (2) that has been placed on top of baffle plate (1). Lower baffle plate (2) into the gap and push towards the back. The assembly is now complete.



FUEL LOADING INSTRUCTION



Fuel type:	Softwood
Average Fuel Load:	8.8 Kg.
Fuel Size Average:	213mm x 80mm dia.
No. Of Pieces:	12
Method of Fuel Loading:	Front to back, 2 on 4 on 6


INSTALLATION INSTRUCTIONS

MINIMUM HEIGHT OF FLUE SYSTEM EXIT INSTALLATION TO COMPLY WITH AS/NZS 2918

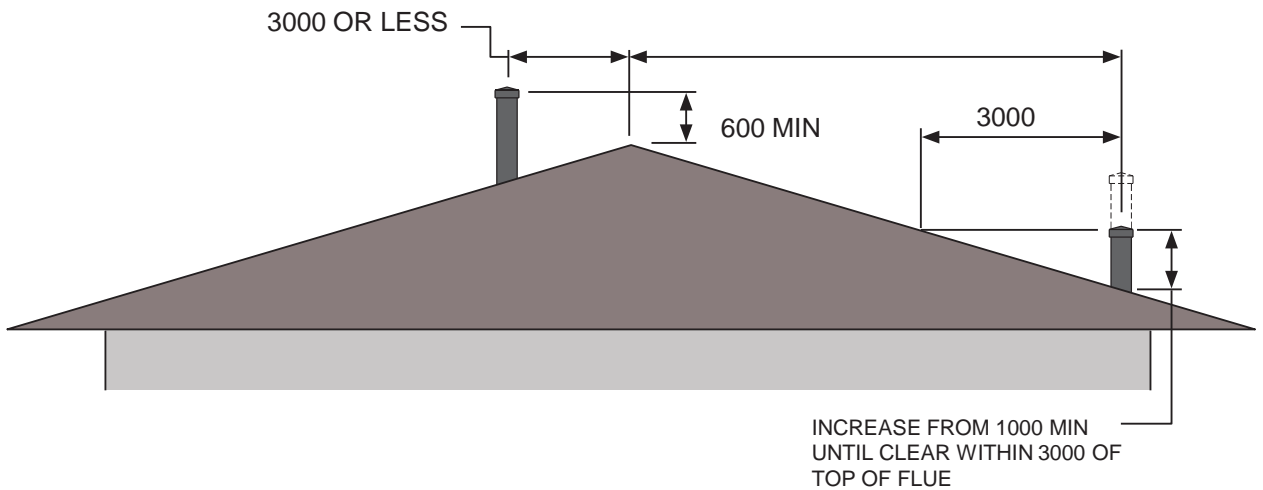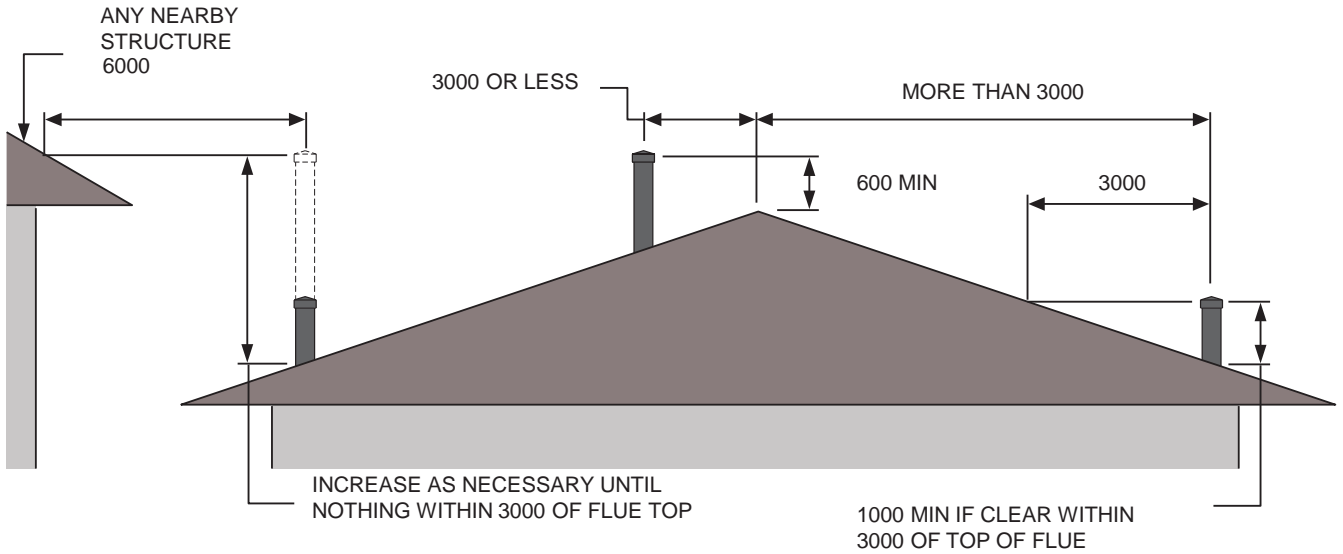


INSTALLATION INSTRUCTION

HALO 800 SOFTWOOD RAKED CEILING INSTALLATION

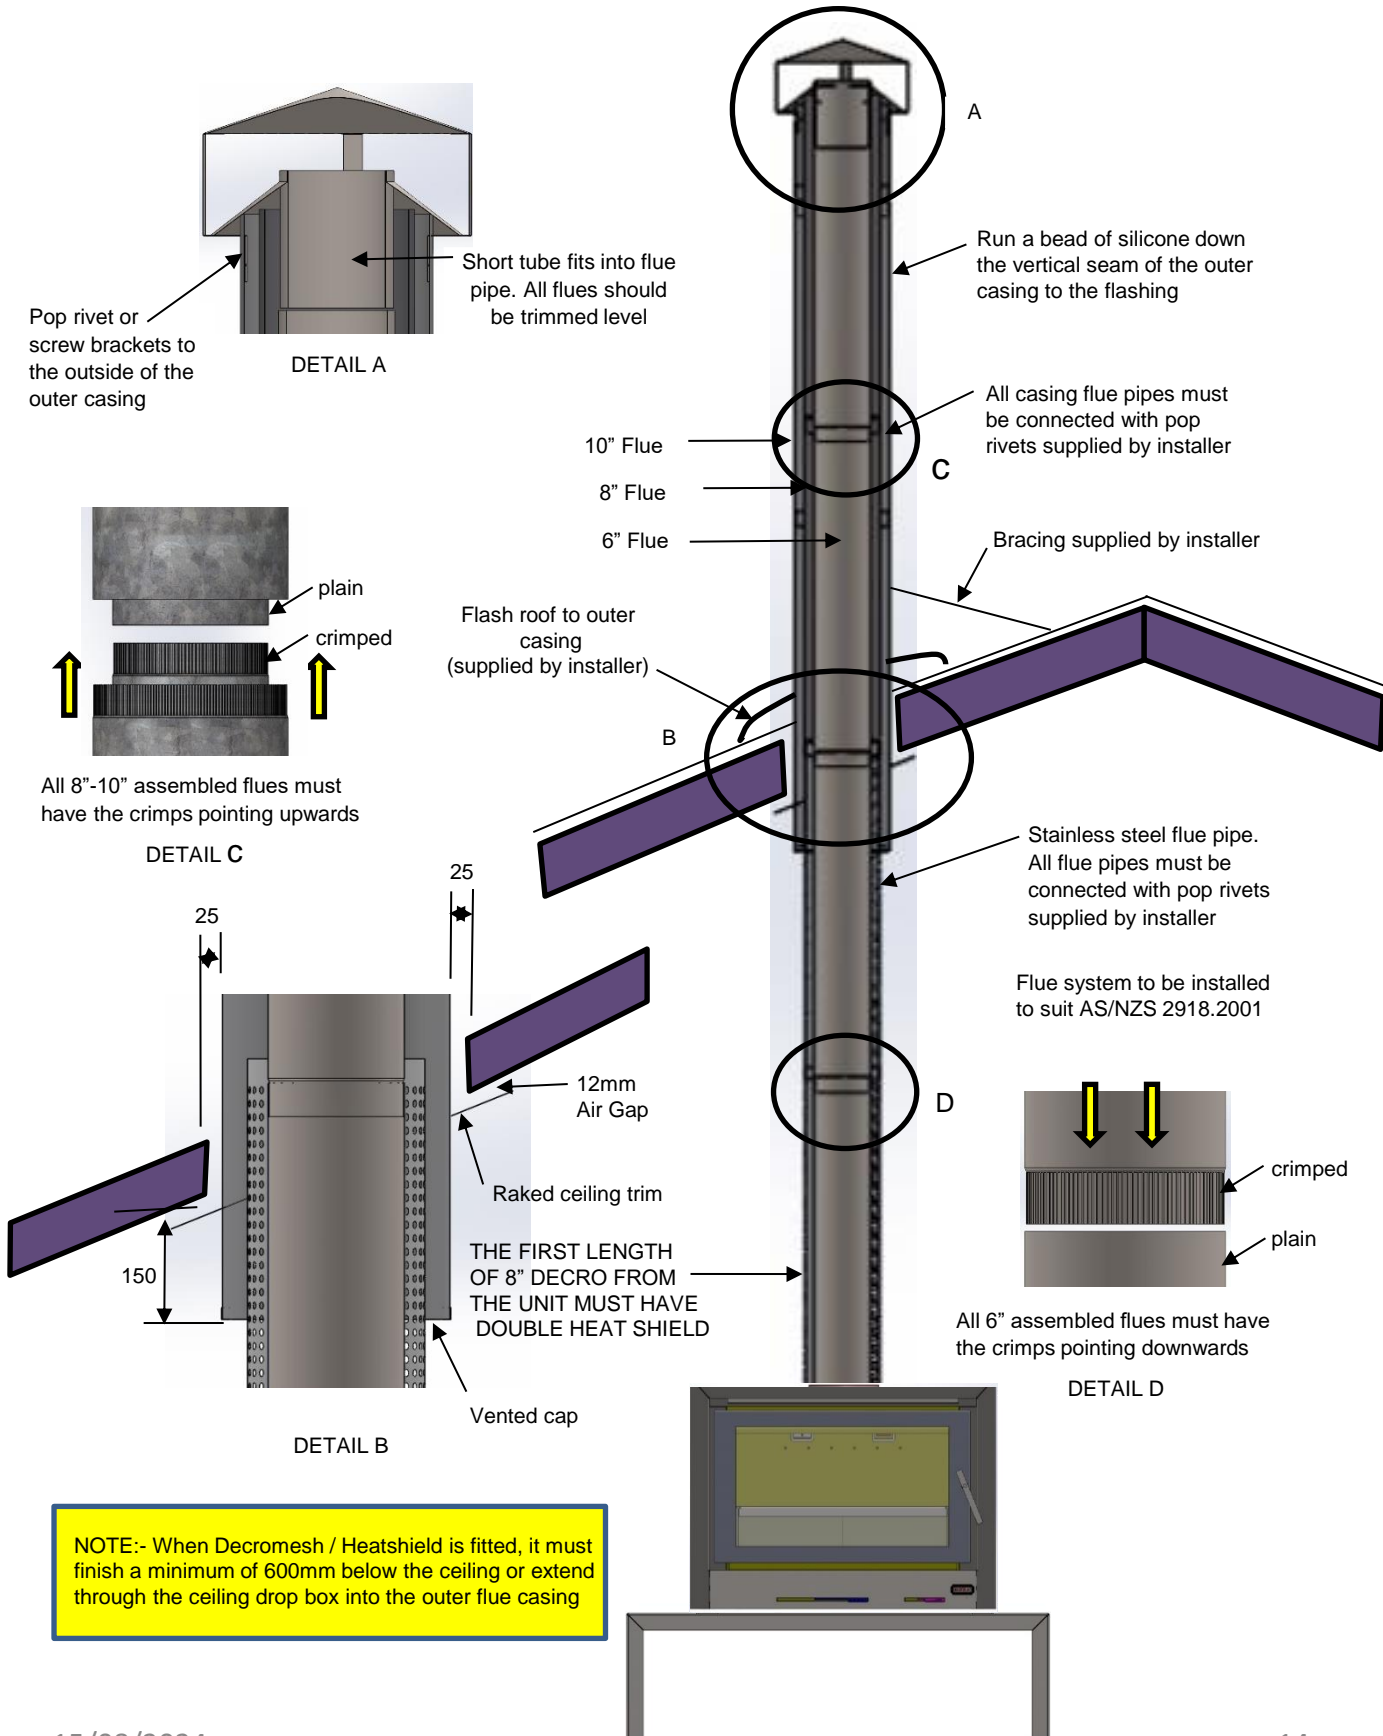

INSTALLATION INSTRUCTION

HALO 800 SOFTWOOD FLAT CEILING INSTALLATION

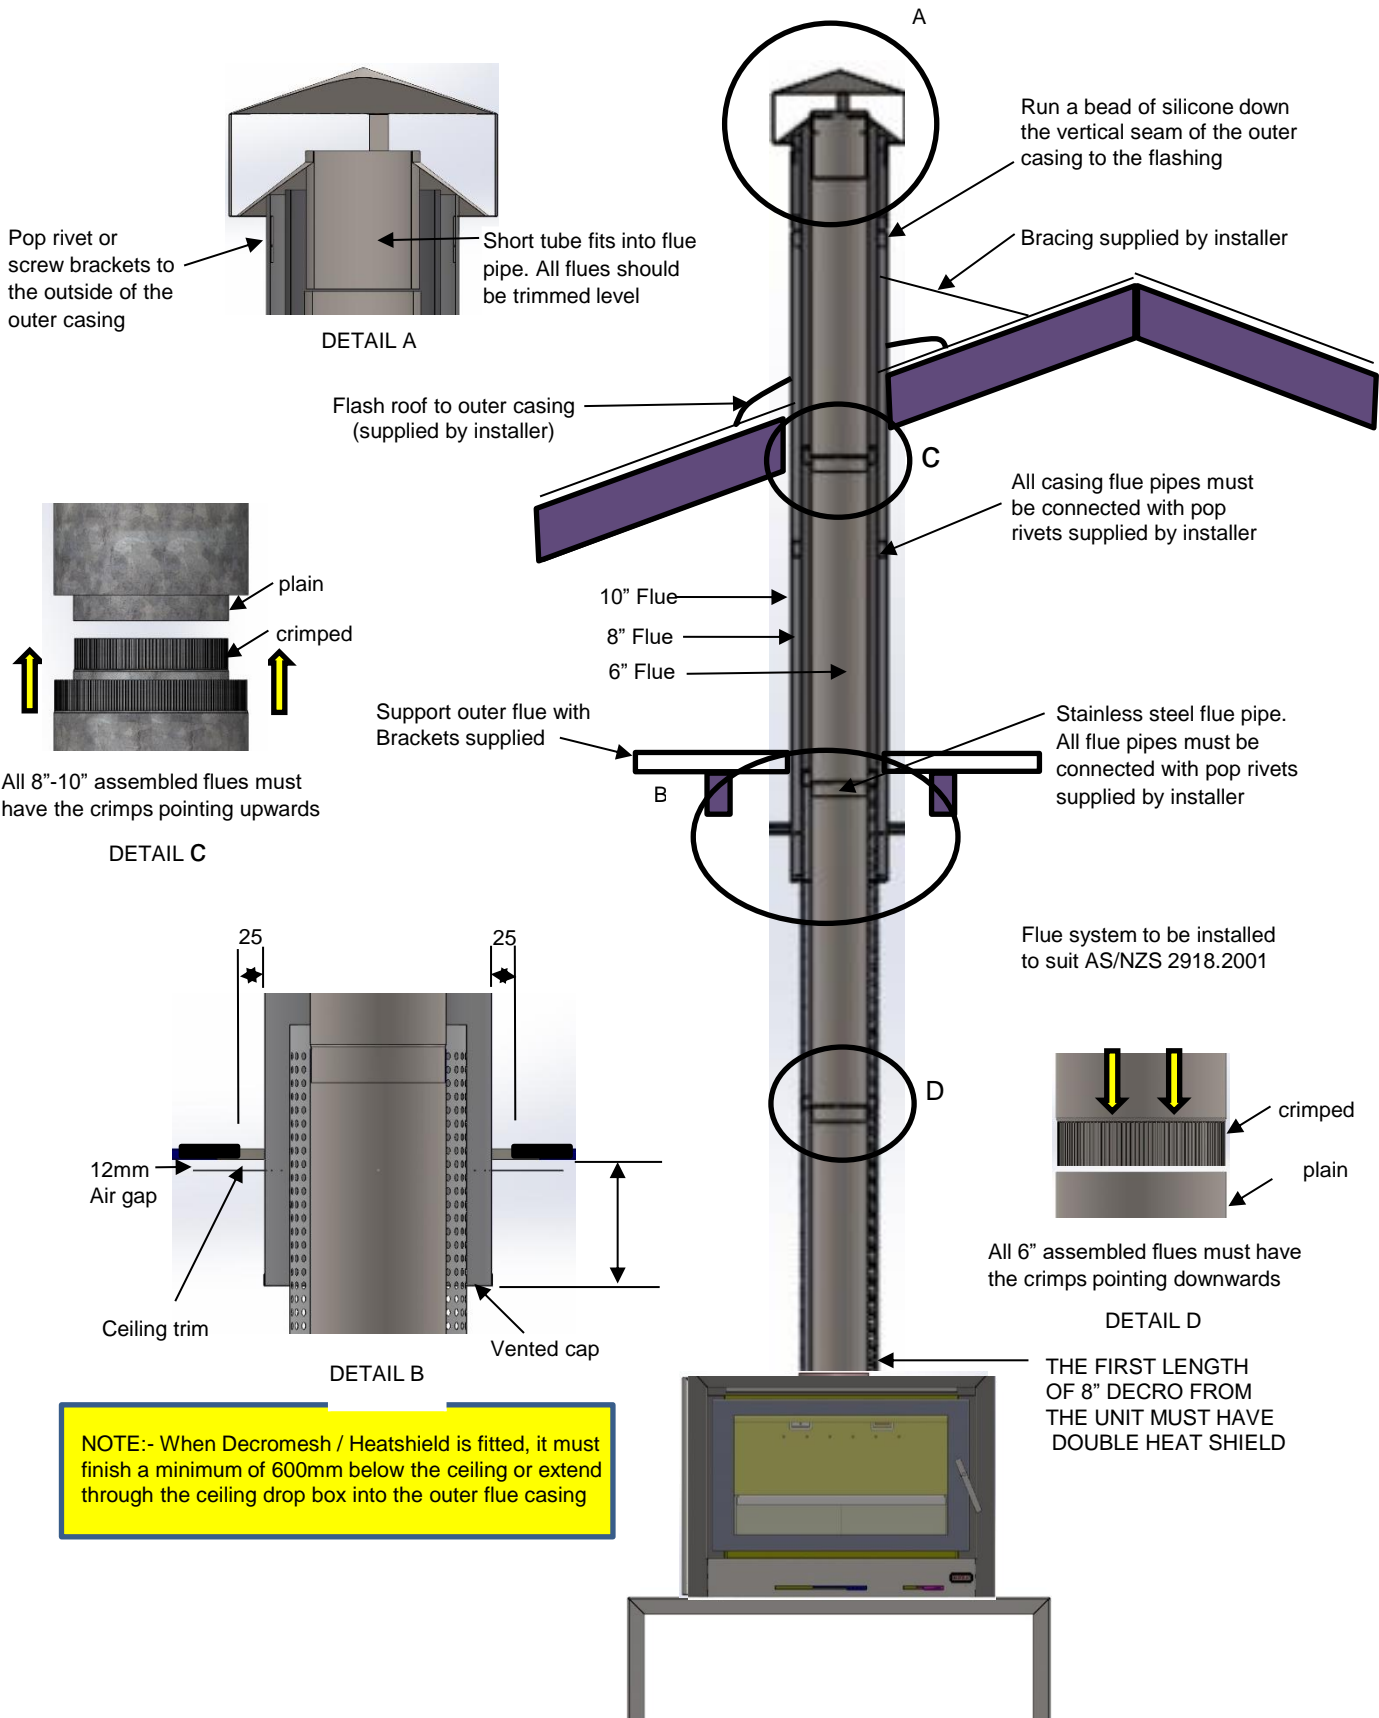

NOTE:

The boost air slide (LHS) needs to be left open for the **first 20 minutes** of operation, in order to light the fire better. After this time, normal appliance operation will commence and the boost air slide will need to be shut for the duration of use.

Operating Instructions

Congratulations on the purchase of your Australian-made Kemlan slow-combustion wood fireplace.

We hope this serves you well, not just as a stunning feature; but as a functional tool for heating your home and keeping you and your family warm however cold the winters may get, because this is what Kemlan specialises in and has perfected, making fires in Brisbane QLD since 1969, 'Australian made for Australian conditions'.

Welcome to the Kemlan family.

I would like to share with you the correct way to operate your Kemlan wood fire giving the best results for both heating and useability.

Let's get started:

The First Burns –

Unfortunately, we have no control over how the fire is loaded nor do we have any control over what quality of fuel/timber is used, therefore we can only give recommendations, and this will be the difference in heat output and length of burn.

Softwood should always be used as the main fuel source in all Kemlan wood heaters at a moisture level of between 12% - 20% (always have a moisture meter).

If the timber is too dry it will burn faster, if the timber is too wet it will struggle to burn at all and give very little heat.

The first few burns in a wood fire are commonly referred to as 'curing burns', this is when you are getting heat into the appliances' steel and paint for the first time.

What we are trying to achieve here is 3-fold:

The **first** goal is to get heat into the white ceramic baffles and the steel flue system, getting these 2 things hot will create the 'draw' of the fireplace this is the process in which the smoke is drawn out of the fireplace chamber through the flue system.

The **second** goal is to lay a bed of ash in the base of the fire, The ash in the bottom of the fire is essential to the performance of the fireplace, the optimal thickness of ash is 2-3 Inches (25mm – 75mm).

Having this bed of ash will assist the fuel to light easier creating an air layer under the timber, it will also assist in a longer hotter burn as the ash holds a large amount of the heat while the timber above is burning. So **DO NOT** clean your ash out until you have to, you should never see the firebricks in the base of your fire.

The **third** goal of the initial burns is to cure the paint on the fireplace casing, Kemlan fires are painted with a high-temperature paint. When first applied at our factory, the paint is very soft, we place all finished fireplaces under heat lamps to start the 'curing' process but because of the time it takes and

the temperature the casing needs to stay at to complete this process we need YOU to finish this cure in your home by lighting your new fire! So, let's do it!.....

Building your fire –

Whether you have purchased a small, medium or large chamber fireplace the set-up is the same.

Kemlan introduces more primary air into the chamber of the fireplace than most other brands on the market, this makes it very easy to light the fire from a cold start, it also makes it easy for you the user of the fireplace to load the paper or firelighters, kindling (small pieces of softwood) and softwood into the chamber straight away.

Your goal should be to fill the fireplace chamber front to back, side to side to make sure heat is evenly distributed throughout the entire firebox.

We don't want to have to keep tending to the fireplace slowly adding pieces of timber and constantly opening the door, one full load of timber is far better.

Scan the QR code below to access the 'How to stack and light your Kemlan wood fire' video.

Please take some time to watch to see if your process is the same.



Now your Kemlan fire is up and running make sure to keep the primary air slide fully open, this will ensure maximum oxygen is getting to the fuel and this will create quicker heat into the fireplace box, baffle, flue, and of course your home.

The air slide can move from extreme left (fully open) to extreme right (fully closed).

Think of this slide like an accelerator and brake on a car. Fully open would be putting your foot down on your car's accelerator, fully closed is like putting the brakes on in the car.

When we want energy into the room (KW) we want the slide open, As the room gets to the desired temperature the air slide can be moved towards the right-hand side reducing the air to the chamber and slowing the energy output and fuel consumption.

The air slide should only be moved half to $\frac{3}{4}$ of the way across while you can still tend to the fire, closing it completely or starving the fire should only be done when you cannot tend to the fire for long periods of time (e.g. going to bed) when your only goal is for the length of burn.

Remember no matter whether it is a curing burn or an everyday use, heat is key, never light a small fire! A small fire in a large, chambered firebox will not produce any heat in the components of the fireplace or in your room. Choose the fire that best suits your living and heating requirements.

Reloading your Kemlan fire –

When it is time to add timber to your fireplace firstly make sure the underside of your white baffles is actually white, if they are still black this will mean the softwood has not fully caught alight. If this is the case wait, you will notice as the fire heats up and your seasoned softwood is fully lit the baffle plates will return to the original white condition, this means the fire drawing correctly through the flue system and burning cleanly with the secondary air in full swing.

You can now open the air slide fully, crack the door slightly allowing the air pressure to equal then carefully fully open the door.

Have the timber you are going to load in the chamber ready to immediately reload, be prepared, don't open the door and then go looking for the optimal pieces of timber, the longer you wait the colder the chamber will get and the higher the chance of smoke coming back into the room.

Overnight burns –

All medium and large size Kemlan fireplaces have what is called an 'overnight burn' but what does this mean??

Like we have touched on above, the air slide should only be shut down fully when you want extended length of burn, as soon as you starve the firebox of air the fire will burn dirtier and heat output will be greatly reduced, in some instances the glass will blacken due to the lack of air movement inside the chamber. The black creosote will burn off the glass when the fires air control is back up to high with a new load of timber.

If you follow these simple steps, you will find your Kemlan fireplace is one of the best investments you have made to your home.

From everyone in Kemlan we thank you for your business and wish you a lifetime of warmth and enjoyment.

IMPORTANT:

UNDER NO CIRCUMSTANCES SHOULD ANY SOLVENTS SUCH AS METHYLATED SPIRITS, PETROL, MINERAL TURPENTINE ETC OR DETERGENTS, BE ALLOWED TO COME IN CONTACT WITH THE PAINTED SURFACE OF THE HEATER AS DAMAGE TO THE FINISH WILL RESULT. IF AN ACCIDENT DOES OCCUR, SPRAY CAN PAINT IS AVAILABLE FROM YOUR NEAREST KEMLAN DEALER.

WARRANTY

1. Kemlan wood heaters carry a warranty on the 6mm firebox for a period of ten (10) years.
2. This warranty also covers other components of the heater for a period of one (1) year. These components include the baffle plate, handle assembly and secondary air tubes.
3. Kemlan's warranty covers the wood heaters against defects in materials and manufacture.

4. THIS WARRANTY DOES NOT COVER –

- 4.1 Failure to comply with manufacturer's operation instructions.
- 4.2 Normal wear and tear or damage caused by incorrect installation.
- 4.3 Any form of rust and/or corrosion to the painted finish of the heater.
- 4.4 Damage to the glass in the door, if the damage is caused by impact or misuse.
- 4.5 The cost of collection and delivery of the wood heater and/or parts.
- 4.6 Damage caused by water ingress.
- 4.7 Cost of removal of defective heater or re-installation of replacement heater.
- 4.8 Failure to use fireplace components supplied by Kemlan Industries Pty Ltd.
- 4.9 Cost of inspection for damaged heater.

5. CLAIMS –

- 5.1 (I) Kemlan will provide a full replacement of the heater in the first five years after installation.
 - (ii) Replacement in the subsequent five years (i.e. sixth to tenth year after installation will be on the following basis.
Owner will pay fifty percent of the current retail price, if the claim is made in the sixth year – tenth year after purchase.
- 5.2 Replacement of heater subject to all conditions in section four of warranty.
- 5.3 Should any defects occur, contact the Kemlan distributor from whom you purchased the heater.
- 5.4 Under this warranty the defective parts will be repaired or replaced, free of charge.
6. The fireplace installation must comply with the relevant local statutes, ordinances, regulations and by-laws.

7. THIS WARRANTY IS VOID IF:

- 7.1 The appliance has been over-fired or operated in atmospheres contaminated by chlorine, fluorine or other damaging chemicals. Over-firing can be identified by, but not limited to, warped plates or tubes, rust coloured cast iron, bubbling, cracking and discolouration of steel or enamel finishes.

PLEASE COMPLETE AND RETAIN THIS SECTION FOR YOUR RECORDS

Purchased from:
Address:
Date of Purchase:

